



FIRE ALARM SENSOR TESTER

Fire Alarm Sensor Tester is able to test smoke sensors, heat sensors and also flame sensors. The Tester has additional three pieces bar to adjust the length of tester up to 2,5 meters.



FLAME SENSOR TEST

Flame sensors can be tested when the button is at the top position. The cover of the head must be dismantled to trigger flame sensors.



SMOKE SENSOR TEST

Smoke sensor can be tested when the button is at the middle position. The nozzle produces smoke during testing.



HEAT SENSOR TEST

Heat sensors can be tested when button is at the lower position. The nozzle provide some heat to trigger heat sensors.





YAF DIESEL SHIP SPARE PARTS TRADING LTD.CO

(HEAD OFFICE)

TURKEY OFFICE

EVLIYA CELEBI MAH.
MEHMET AKIF SOK. NO:1
Tuzla | ISTANBUL / TURKEY

MOBILE : 0090 533 281 24 77
PHONE : 0090 216 494 49 02
FAX : 0090 850 225 2300

info@yafdiesel.com.tr

CHINA OFFICE

ROOM 1901 NO:3 LANE 99
JINHU ROAD JINQIAO PUDONG
SHANGHAI / CHINA

MOBILE : 0086 186576 38209
PHONE : 0086 2158570161
0090 216 494 49 02

china@yafdiesel.com.tr

KOREA OFFICE

1411 MARINE CENTER BLDG.
CHUNGJANG-DAERO 9 BEONGIL 52
BUSAN / KOREA / ZIP CODE 48936

MOBILE : +82 (0)10 2654 4676
PHONE : +82 (0)51 468 9501
FAX : +82 (0)51 719 9501

korea@yafdiesel.com.tr

